


# User manual AIR LED

**Congratulations, you have just purchased a first class, ergonomic LED tasklight. To make sure you get maximum performance and efficiency from your investment, please read this manual.**

AIR LED has a flexible arm adjustable too meet any needs. It has a self-balancing spring mechanism that allows vertical movements. The head can not be tilted because this would interfere with optimum light-distribution and could cause glare. The head can be adjusted laterally.

AIR LED uses a sophisticated lens system to project the light asymmetrically to the work surface. The luminaire will give maximum illumination 10"/25 cm in front of the luminaire. Reflections from glossy paper etc will be in a different angle than the viewer and will not cause glare.

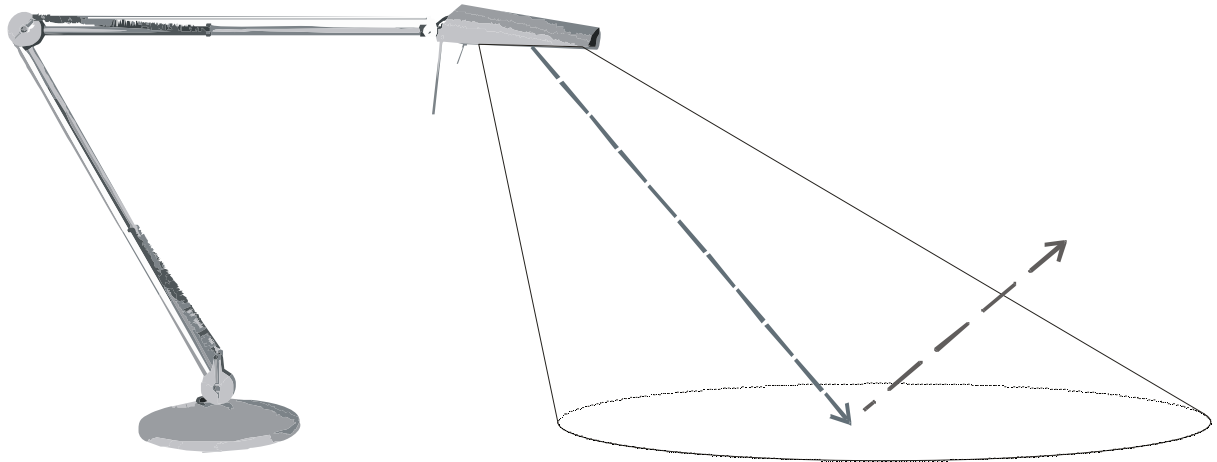

For right handed users, the luminaire should be positioned on the left side to prevent shadows in the work-field. For left-handed users, the correct position is right side.

To prevent deterioration of the LED's, AIR LED will start to dim if the ambient temperature exceeds 100 Fahrenheit/ 40 Centigrade. If critical temperatures are reached, AIR LED will start to blink. It will restore to full power when normal operating temperatures are reached.

**Warning: AIR LED contains 3 high-power LED's. Do not look directly into the lenses. Prolonged viewing might cause eye-damage.**



LUXO is offering you a full 5 year warranty on this product

LUXO ASA. Drammensveien 175, N-0277 Oslo, NORWAY  
Tel. + 47 22 57 40 00. Fax + 47 22 19 62 84. NO 957 558 208 MVA. Bank 7066.05.08188. [www.luxo.com](http://www.luxo.com)