

Drive-in Ramp

Installation Instructions nr.16

- Thank you for buying a FEAL product!
- Check that no damage has occurred on the ramp during transport.
- Read the operating instructions and warnings carefully before using the ramp. Save the operating instructions for future needs.
- On each ramp there is a decal indicating the maximum weight of the ramp.

Take it carefully and use the ramp with good judgment. Important that the ramp is laid on a solid surface.

- The height of the ramp can be adjusted with adjustable feet supplied with the ramp (picture A)
- Note the difference in size of the reinforcement brackets (picture B)
- The smaller reinforcement bracket should be on the inside and the larger on the outside when the adjustable feet are fixed with a nut on the inside and one on the outside. (picture C)
- Should a damage occur on the ramp, do not use it until repair has been repaired by a person skilled in the art. Spare parts are presented on a separate spare part list.

Care and reconditioning

- No maintenance or cleaning is normally needed if the bolts are correctly installed.

Disassembly and recycling

- All input material is 100% recyclable. Aluminum is left as metal scrap.



Bild A



Bild B



Bild C

