

# SANYO

## HEC-DR7700

### The Feeling of Zero Gravity



# Massage lounger



### Zero Gravity Position


Pressing one button puts you in a comfortable position.

#### Standby



Press the button.

#### Zero Gravity Position 1

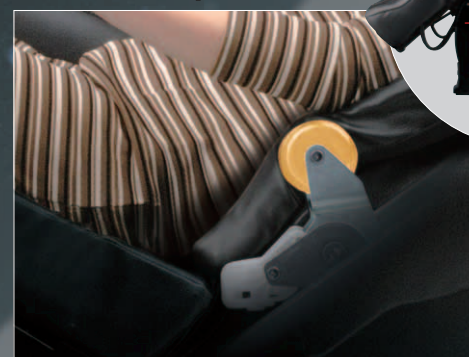

**Improved fit to lower back**  
By also tilting the seat surface, the lower back position is stabilized, making the body less likely to float up so that the massage heads fit firmly against the body.

The back, legs, and seat all tilt simultaneously, automatically putting you in a relaxing position.

Press the button again.



#### Zero Gravity Position 2

Position is adjusted to the best position for leg massage, and stimulation by airbags alone is performed to loosen up legs.

#### Easy-roll casters

You can easily move it when you want to.



#### Easy to care for

Just wipe off stains with a cloth.



#### Specifications

Power consumption	290W	Tapping frequency	(5 stages) Approx. 300 ~ 600 times/min.
Power dissipation of electric heating equipment	33W	Tapping width	(5 stages) Approx. 70 ~ 130mm    Approx. 3 ~ 5"
Rated time	30min.	Vertical movement speed	One up/down pass in approx. 35 sec.
Timer	WHOLE BODY SENSOR AUTOMATIC COURSE (Maximum of approx. 20 minutes.)	Spine stretching width	(5 stages) Approx. 70 ~ 130mm    Approx. 3 ~ 5"
	AUTOMATIC COURSE	Range of partial stretching	Partial stretching (Long) : Repetition within Approx. 200 mm 8"
	MANUAL COURSE	Partial stretching (Short) : Repetition within Approx. 100 mm 4"	
Dimensions	730 mm [width] × 1,350 mm [depth] × 1,220 mm [height] 28 3/4" [width] × 53 1/8" [depth] × 48" [height] When not reclined (with foot rest retracted)	Vertical stroke length	Approx. 790 mm    Approx. 31"
	730 mm [width] × 1,840 mm [depth] × 760 mm [height] 28 3/4" [width] × 72 7/16" [depth] × 29 15/16" [height] When reclined (with foot rest set horizontally)	Height adjustment of massaging rollers	No gradation or 1 cm 3/8" / one press of button
Weight	Approx. 83 kg    Approx. 183 lbs	Reclining angle	Approx. 120 ~ 170°
Accessories	Stand, Installation screws (Three)	Reclining method	Back-rest : Motor-driven type (Linked with foot rest) Foot-rest : Motor-driven type (Foot rest only) Seat surface : Motor-driven type (Linked with back rest and foot rest)
Exterior cloth	Synthetic leather type, Real leather type Materials differ according to type.	Lower body massaging (Air pressure)	(3 stages) Approx. 23 ~ 32 kPa    Approx. 3.3 ~ 4.6 PSI There is a slight difference according to the part.
Kneading frequency	(5 stages) Approx. 10 ~ 30 times/min.		

#### NOTICES

- Please read the Instruction Manual thoroughly before use.
- For those undergoing medical treatment, please consult your doctor before using this Massage lounger.

Distributed by:

# SANYO

SANYO Electric Co., Ltd  
©2006 SANYO Printed in Japan 2006.12